

TIP

Brand	Model	Tip
Acer	AcerNote - 367D	4
Acer	AcerNote - 367T	4
Acer	AcerNote - 390	4
Acer	Anywhere - 1100LX	4
Acer	Anywhere - 1120LX	4
Acer	Aspire - 1200	2
Acer	Aspire - 1362LCi	4
Acer	Aspire - 1362WLMi	4
Acer	Aspire - 1363WLCi	4
Acer	Aspire - 1522WLMi	4
Acer	Aspire - 1524WLMi	4
Acer	Aspire - 1641WLMi	2
Acer	Aspire - 1642WLMi	2
Acer	Aspire - 1642XWLMi	2
Acer	Aspire - 1642z	2
Acer	Aspire - 1680	2
Acer	Aspire - 1683WLMi	2
Acer	Aspire - 1690	2
Acer	Aspire - 1691WLCi	2
Acer	Aspire - 2000	2
Acer	Aspire - 2001LCi	2
Acer	Aspire - 2002LCi	2
Acer	Aspire - 2002LMi	2
Acer	Aspire - 2003LMi	2
Acer	Aspire - 2010	2
Acer	Aspire - 2012WLCi	2
Acer	Aspire - 2012WLMi	2
Acer	Aspire - 2020	2
Acer	Aspire - 2025WLMi	2
Acer	Aspire - 3000	2
Acer	Aspire - 3002LC	2
Acer	Aspire - 3002LMi	2
Acer	Aspire - 3003LCi	2
Acer	Aspire - 3003WLCi	2
Acer	Aspire - 3003WLMi	2
Acer	Aspire - 3004WLCi	2
Acer	Aspire - 3022WLMi	2
Acer	Aspire - 3050-1047	2
Acer	Aspire - 3050-1594	2
Acer	Aspire - 3050-1854	2
Acer	Aspire - 3612LCi	2
Acer	Aspire - 3613	2
Acer	Aspire - 3614WLMi	2
Acer	Aspire - 3618AWLCi	2
Acer	Aspire - 3622WXCi	2
Acer	Aspire - 3623NWXMi	2
Acer	Aspire - 3623WLCi	2
Acer	Aspire - 3623WLMi	2

TIP

Acer	Aspire - 3623WXCi	2
Acer	Aspire - 3623WXMi	2
Acer	Aspire - 3624WXCi	2
Acer	Aspire - 3624WXMi	2
Acer	Aspire - 3634WLMi	2
Acer	Aspire - 3680-2022	2
Acer	Aspire - 3680-2626	2
Acer	Aspire - 3680-2633	2
Acer	Aspire - 3680-2974	2
Acer	Aspire - 3690-2710	2
Acer	Aspire - 3693WLMi	2
Acer	Aspire - 5002WLMi	2
Acer	Aspire - 5003WLMi	2
Acer	Aspire - 5024	2
Acer	Aspire - 5050-3465	2
Acer	Aspire - 5050-3785	2
Acer	Aspire - 5050-5278	2
Acer	Aspire - 5050-5410	2
Acer	Aspire - 5050-5554	2
Acer	Aspire - 5050-5555	2
Acer	Aspire - 5050-5827	2
Acer	Aspire - 5050-5951	2
Acer	Aspire - 5100	2
Acer	Aspire - 5100-3357	2
Acer	Aspire - 5100-3577	2
Acer	Aspire - 5100-3583	2
Acer	Aspire - 5100-3748	2
Acer	Aspire - 5100-3825	2
Acer	Aspire - 5100-3949	2
Acer	Aspire - 5100-3959	2
Acer	Aspire - 5100-5328	2
Acer	Aspire - 5100-5540	2
Acer	Aspire - 5100-5840	2
Acer	Aspire - 5100-5873	2
Acer	Aspire - 5101AWLMi	2
Acer	Aspire - 5101WLMi	2
Acer	Aspire - 5102WLMi	2
Acer	Aspire - 5315-2122	2
Acer	Aspire - 5512WLMi	2
Acer	Aspire - 5513EWLM	2
Acer	Aspire - 5514WLMi	2
Acer	Aspire - 5514WXMi	2
Acer	Aspire - 5520-5912	2
Acer	Aspire - 5570-2067	2
Acer	Aspire - 5570-2609	2
Acer	Aspire - 5570-2758	2
Acer	Aspire - 5570-2792	2
Acer	Aspire - 5570-2935	2
Acer	Aspire - 5570-4421	2

TIP

Acer	Aspire - 5570-4765	2
Acer	Aspire - 5570z	1
Acer	Aspire - 5580-6432	1
Acer	Aspire - 5670	4
Acer	Aspire - 5680-6509	2
Acer	Aspire - 5720-4126	2
Acer	Aspire - 5920	2
Acer	Aspire - 7104WSMi	2
Acer	Aspire - 9402WSMi	2
Acer	Aspire - 9411AWSMi	4
Acer	Aspire 4520WXMi LAPTOP (VHB-C	2
Acer	Aspire 4715Z NWXMi LAPTOP(051	2
Acer	Aspire 4720Z LAPTOP (VHB-059Y	3
Acer	Aspire 5920WLMi LAPTOP (VHP-11	2
Acer	ASPIRE ONE	2
Acer	Extensa - 2300	2
Acer	Extensa - 3000	2
Acer	Extensa - 366D	4
Acer	Extensa - 367D	4
Acer	Extensa - 367T	4
Acer	Extensa - 368D	4
Acer	Extensa - 391C	4
Acer	Extensa - 391T	4
Acer	Extensa - 392C	4
Acer	Extensa - 392T	4
Acer	Extensa - 393	4
Acer	Extensa - 393C	4
Acer	Extensa - 393T	4
Acer	Extensa - 394T	4
Acer	Extensa - 395T	4
Acer	Extensa - 900	4
Acer	Extensa - 900CDT	4
Acer	Extensa - 900T	4
Acer	Extensa - Ess3-391T	4
Acer	Extensa - EX4620-4605	2
Acer	Extensa - EX5620-6830	2
Acer	Ferrari - 1004WTMi	2
Acer	Ferrari - 3000LMi	4
Acer	Ferrari - 3200LMi	4
Acer	Ferrari - 3400LMi	4
Acer	Ferrari - 4005WLMi	4
Acer	Ferrari - 4006WLMi	4
Acer	Tablet - TMC104TCi	2
Acer	Tablet - TMC110TCi	2
Acer	Tablet - TMC110Ti	2
Acer	TravelMate - 222X	2
Acer	TravelMate - 223X	2
Acer	TravelMate - 225X	2
Acer	TravelMate - 225XC	2

TIP

Acer	TravelMate - 225XV-PRO	2
Acer	TravelMate - 2300	2
Acer	TravelMate - 2301LC	2
Acer	TravelMate - 2301LCi	2
Acer	TravelMate - 2301WLCi	2
Acer	TravelMate - 2301XC	2
Acer	TravelMate - 2303LC	2
Acer	TravelMate - 2303LCi	2
Acer	TravelMate - 2303WLCi	2
Acer	TravelMate - 2304LCi	2
Acer	TravelMate - 2304WLCi	2
Acer	TravelMate - 2305	2
Acer	TravelMate - 230X	2
Acer	TravelMate - 230XC	2
Acer	TravelMate - 230XV	2
Acer	TravelMate - 230XV-PRO	2
Acer	TravelMate - 2310	2
Acer	TravelMate - 233LC	2
Acer	TravelMate - 233X	2
Acer	TravelMate - 233XV	2
Acer	TravelMate - 233XVi	2
Acer	TravelMate - 234LCi	2
Acer	TravelMate - 2350	2
Acer	TravelMate - 2400	2
Acer	TravelMate - 2410	2
Acer	TravelMate - 2413WLMi	2
Acer	TravelMate - 2420	2
Acer	TravelMate - 2423WXCi	2
Acer	TravelMate - 2423WXMi	2
Acer	TravelMate - 2440	2
Acer	TravelMate - 2450	2
Acer	TravelMate - 2451WLCi	2
Acer	TravelMate - 2460	2
Acer	TravelMate - 2470	2
Acer	TravelMate - 2480	2
Acer	TravelMate - 2480-2106	2
Acer	TravelMate - 2480-2153	2
Acer	TravelMate - 2480-2247	2
Acer	TravelMate - 2480-2551	2
Acer	TravelMate - 2480-2598	2
Acer	TravelMate - 2480-2705	2
Acer	TravelMate - 2480-2779	2
Acer	TravelMate - 2480-2943	2
Acer	TravelMate - 2481WXCi	2
Acer	Travelmate - 2482WXMi	2
Acer	TravelMate - 261XC	2
Acer	TravelMate - 261XV	2
Acer	TravelMate - 272LC	2
Acer	TravelMate - 272XV	2

TIP

Acer	TravelMate - 273LC	2
Acer	TravelMate - 273XV	2
Acer	TravelMate - 281XC	2
Acer	TravelMate - 281XV	2
Acer	TravelMate - 283LC	2
Acer	TravelMate - 283LCi	2
Acer	TravelMate - 283XV	2
Acer	TravelMate - 283XVi	2
Acer	TravelMate - 290	2
Acer	TravelMate - 292	2
Acer	TravelMate - 3000	2
Acer	TravelMate - 3002WTMi	2
Acer	TravelMate - 3004WTMi	2
Acer	TravelMate - 3010	2
Acer	TravelMate - 3012WTMi	2
Acer	TravelMate - 3020	2
Acer	TravelMate - 3030	2
Acer	TravelMate - 3040	2
Acer	TravelMate - 3200	2
Acer	TravelMate - 3210	2
Acer	TravelMate - 3220	2
Acer	TravelMate - 3230	2
Acer	TravelMate - 3250	2
Acer	TravelMate - 3252WXMi	2
Acer	TravelMate - 3260	2
Acer	TravelMate - 3260-4853	2
Acer	TravelMate - 3260-4874	2
Acer	TravelMate - 3270	2
Acer	TravelMate - 3270-6569	2
Acer	TravelMate - 3300	2
Acer	TravelMate - 350TE	2
Acer	TravelMate - 350TE-N	2
Acer	TravelMate - 351TE-N	2
Acer	TravelMate - 351TEV	2
Acer	TravelMate - 351TEV-D	2
Acer	TravelMate - 351TEV-N	2
Acer	TravelMate - 353TEV	2
Acer	TravelMate - 354TEV	2
Acer	TravelMate - 380	2
Acer	TravelMate - 4000	2
Acer	TravelMate - 4000LCi	2
Acer	TravelMate - 4000WLCi	2
Acer	TravelMate - 4001LCi	2
Acer	TravelMate - 4001WLCi	2
Acer	TravelMate - 4001WLMi	2
Acer	TravelMate - 4002WLMi	2
Acer	TravelMate - 4010	2
Acer	TravelMate - 4020	2
Acer	TravelMate - 4050	2

TIP

Acer	TravelMate - 4060	2
Acer	TravelMate - 4070	2
Acer	TravelMate - 4072WLCi	2
Acer	TravelMate - 4072WLMi	2
Acer	TravelMate - 4080	2
Acer	TravelMate - 4100	2
Acer	TravelMate - 4101WLMi	2
Acer	TravelMate - 4150	2
Acer	TravelMate - 4202WLMi	4
Acer	TravelMate - 4222WLMi	2
Acer	TravelMate - 4500	2
Acer	TravelMate - 4501WLMi	2
Acer	TravelMate - 4502LMI	2
Acer	TravelMate - 4600	2
Acer	TravelMate - 4604WLMi	2
Acer	TravelMate - 4650	2
Acer	TravelMate - 5004WLMi	2
Acer	Travelmate - 5602WLMi	2
Acer	TravelMate - 5720-602 G16Mi	2
Acer	TravelMate - 6000	2
Acer	TravelMate - 6003LMi	2
Acer	TravelMate - 6020	2
Acer	TravelMate - 6030	2
Acer	TravelMate - 6050	2
Acer	TravelMate - 6050NT	2
Acer	TravelMate - 610TXVi	2
Acer	TravelMate - 610TXVi-Me	2
Acer	TravelMate - 611TXCi	2
Acer	TravelMate - 611TXCi-D	2
Acer	TravelMate - 611TXV	2
Acer	TravelMate - 612TXCi	2
Acer	TravelMate - 612TXV	2
Acer	TravelMate - 613TXV	2
Acer	TravelMate - 614TXCi	2
Acer	TravelMate - 630XCi	2
Acer	TravelMate - 630XV	2
Acer	TravelMate - 632XCi	2
Acer	TravelMate - 633LCi	2
Acer	TravelMate - 634XCi	2
Acer	TravelMate - 636LCi	2
Acer	TravelMate - 661LCi	2
Acer	TravelMate - 662LMi	2
Acer	TravelMate - 730TXV	2
Acer	TravelMate - 732TLV	2
Acer	TravelMate - 732TXV	2
Acer	TravelMate - 734TL	2
Acer	TravelMate - 734TXV	2
Acer	TravelMate - 735TLV	2
Acer	TravelMate - 736TL	2

TIP

Acer	TravelMate - 736TLV	2
Acer	TravelMate - 737TLV	2
Acer	TravelMate - 738TLV	2
Acer	TravelMate - 739GTLV	2
Acer	TravelMate - 739TLV	2
Acer	TravelMate - 740LVF	2
Acer	TravelMate - 741LVF	2
Acer	TravelMate - 744LCF	2
Acer	TravelMate - 8000	2
Acer	TravelMate - 8002LCi	2
Acer	TravelMate - 8003LMi	2
Acer	TravelMate - 8006LMi	2
Acer	TravelMate - 800LCi	2
Acer	TravelMate - 800XCi	2
Acer	TravelMate - 802LCi	2
Acer	TravelMate - 803LCi	2
Acer	TravelMate - 804LMi	2
Acer	TravelMate - 8100	2
Acer	TravelMate - 8100A	2
Acer	TravelMate - 8103WLMi	2
Acer	TravelMate - 8104WLMi	2
Acer	TravelMate - 8204	4
Acer	TravelMate - C110	2
Acer	TravelMate - C110CTi	2
Acer	TravelMate - C110Ti	2
Acer	TravelMate - C111TCi	2
Acer	TravelMate - C111Ti	2
Acer	TravelMate - C112TCi	2
Acer	TravelMate - C112Ti	2
Acer	TravelMate - C113TCi	2
Acer	TravelMate - C113Ti	2
Acer	TravelMate - C200	2
Acer	TravelMate - C203ETCi	2
Acer	TravelMate - C210	2
Acer	TravelMate - C300	2
Acer	TravelMate - C301XCi	2
Acer	TravelMate - C301XCi-G	2
Acer	TravelMate - C301XCi-G-SP	2
Acer	TravelMate - C302XCi	2
Acer	TravelMate - C302XMi	2
Acer	TravelMate - C303XMi	2
Acer	TravelMate - C310	2
Acer	TravelMate - TM279	2
Acer	TravelMate - TM360	2
Acer	TravelMate - TM370	2
Acer	TravelMate - TM380	2
Acer	TravelMate - TM520	2
Acer	TravelMate - TM530	2
Acer	TravelMate - TM620	2

TIP

Acer	TravelMate - TMC110	2
Acer	TravelMate - TMC113LCi	2